Adobe Mineral Paint™ Basic Application

step 1.

step 2.

step 3.

step 4.
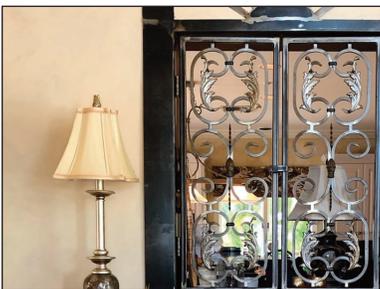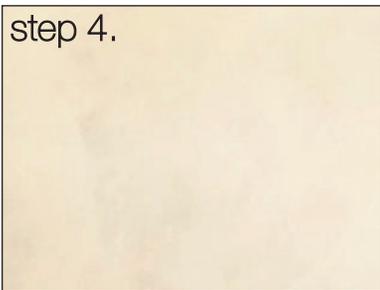
Products: Adobe Mineral Paint™

Tools: Pounce Brush

step 1. Dip pounce brush into Adobe Mineral Paint™ and apply in a cross hatch pattern.

step 2. Continue the cross hatch blending technique to achieve uniform coverage.

step 3. Apply a second coat if needed for more coverage.

step 4. Adobe Mineral Paint™ dries to a matte "Adobe" light absorbing finish.

Tips:

Always make a sample to ensure the desired result.

Mix thoroughly before each use.

FAUX Effects®